

Fig 2: Current decay and temperature rise after a natural quench.

Fig 3 shows the internal resistive voltage for a natural quench – slightly greater with RRR=50.

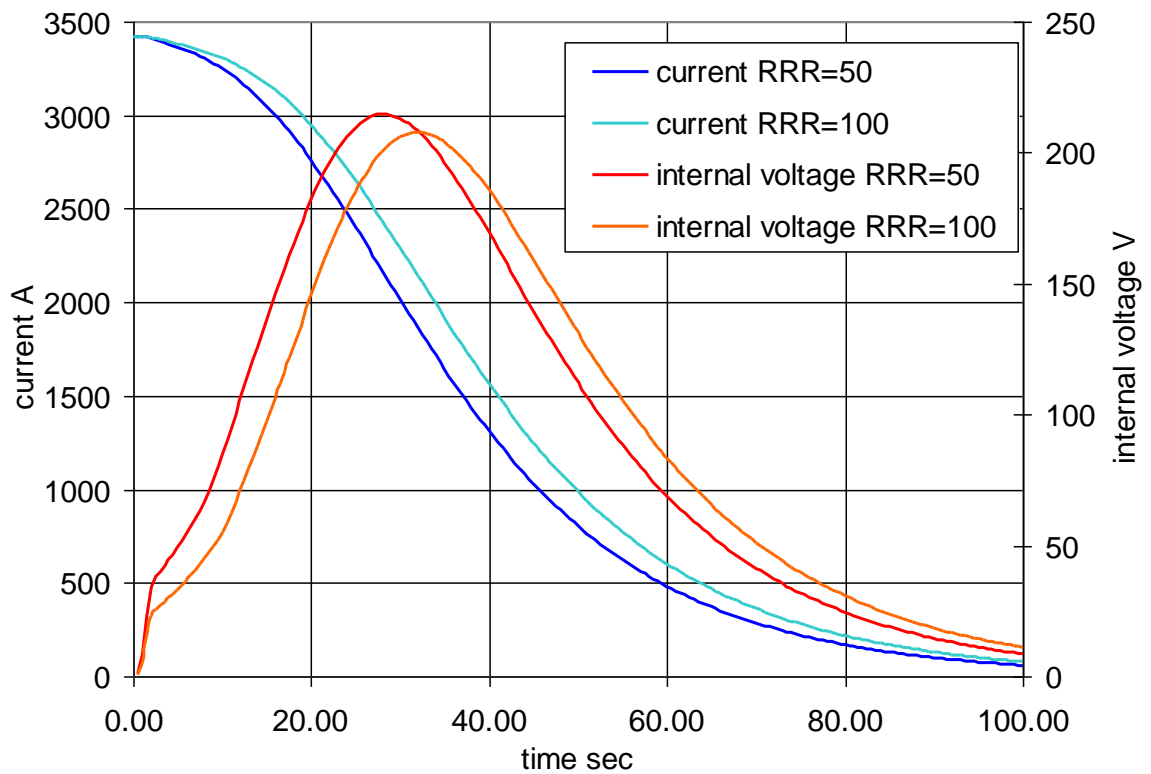


Fig 3: Current decay and internal resistive voltage after a natural quench.